

# Showery Linear Drain (Wooden Floor) - Fitting Instructions



**1** Decide where the Showerlay is to go, then mark out the position of the drain hole.



**2** Draw a larger circle around the hole with a diameter of between 130mm to 150mm and cut this out using a saw.




**3** Twist the drain to adjust the angle of the exit pipe if necessary to achieve the most suitable gradient.



**4** Solvent weld the drain to the BS40mm pipe so it is positioned centrally in the hole.



**5** Ensure that the floor is level and clean. Using a cement-based flexible tile adhesive, stick the Showerlay to the floor and position the drain tray into position.

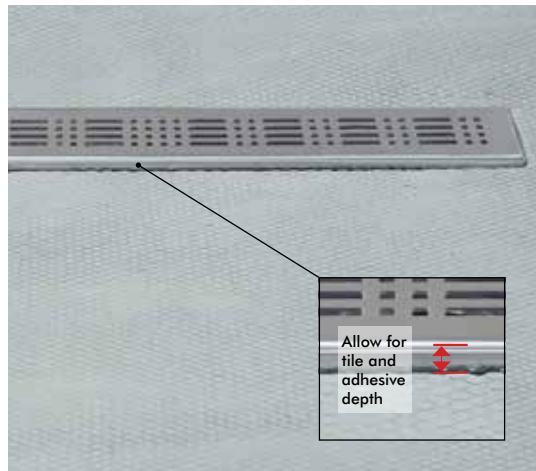

**6** The grate needs to be flush with the tiled surface (tile + adhesive). Raise the whole drainage channel using the 2mm and 4mm self-adhesive spacers.



**7** Stick the four 4mm self-adhesive pads to the metal base of the Showerlay.



**8** If the height needs to be increased further, additional 2mm thick spacers can be stuck on top of the other spacers

# Showery Linear Drain (Wooden Floor) - Fitting Instructions



**9** Screw the flange ring through the Showerlay into the drain below. Hand-tighten using the red "key". No sealants should be used.



**10** Showerlay-Linear are 40mm thick. The rest of the floor can be raised to this height using Multiboard 40mm.



**11** Waterproof all the joints using waterproof tape and waterproof corners then fit the decorative grate, having first inserted the hair trap.

## Installing Standard Showerlay lowered to joist level



**A** Decide where the Showerlay is to go, draw around it and cut the floor section out using a jigsaw.



**B** Make support shelves with the cut up flooring and battens fixed to the side of the joists.



**C** Ensure that this is flat, secure and will support the entire Showerlay.



**D** Install the Showerlay as detailed above, which will result in the Showerlay being level with the floor.