

# Bath Panel - Fitting Instructions



**1** Check you have all tools needed. Marmox Bath Panels come in two sheets, 1800mm x 600mm x 30mm and 800mm x 600mm x 30mm.




**2** Position the bath and make sure you have enough room to allow a 30mm panel to fit under both sides. Move legs over if necessary.



**3** Measure and mark the smallest panel against the end of the bath. Be sure to leave a 30mm gap on the outer edge for the side panel to sit in front of.



**4** Cut the panel to size using a saw.

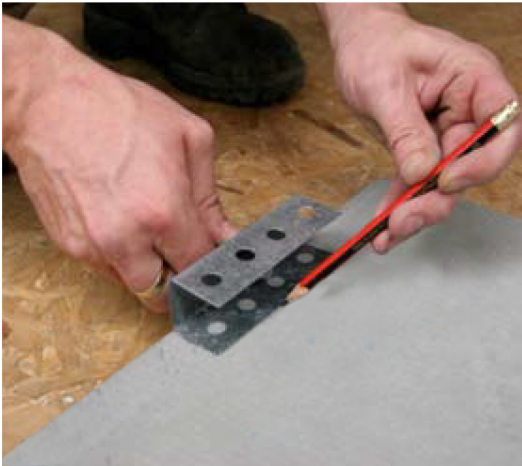

**5** Hold the feet against the bottom of the end panel and mark around it. This should be roughly 100mm in from each end. 2 feet per panel



**6** Cut out the marked section using a saw or knife.



**7** Drive a screwdriver into the panel in the centre of the cut out section to allow the bolt to sit inside the foam.



**8** Push fit the feet into position and screw the feet down until they are flush with the edge of the board.